

User Instruction Manual

BURCO

4 & 6 Slot Toasters




Please read and keep these instructions

This covers the Burco 4 & 6 slot toasters

TSSL14 & TSSL16

444440355 & 444440356

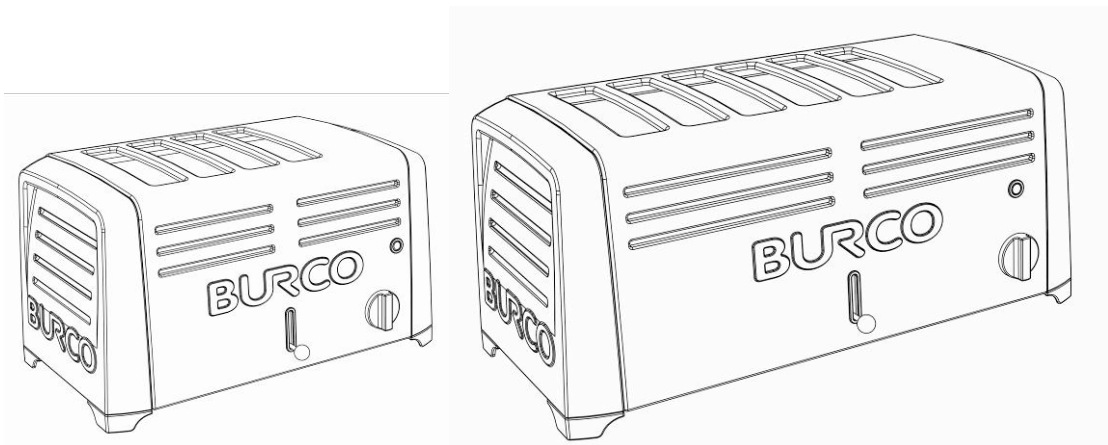

Red End Cap 4 slot 444440606

Red End Cap 6 slot 444440608

Cream End Cap 4 slot 444440607

Cream End Cap 6 slot 444440609

Black End Cap 4 slot 444440980

Black End Cap 6 slot 444440981

BURCO

Glen Dimplex Professional Appliances
Stoney Lane, Prescot, Merseyside, L35 2XW

Tel: 0844 815 3755 Fax: 0844 815 3748

Email: info@gdpa.co.uk

www.burco.co.uk

1. Important Safety Instructions

The use of an electrical appliance requires the following common sense safety rules. Primarily there is a danger of personal injury and secondly damage to the appliance and property. These are indicated in the instructions by the following two conventions:-

WARNING: Danger of personal injury.

IMPORTANT: Damage to the appliance.

In addition we offer the following safety advice:

2. Installation

Preparation

- The Installation of the unit must be performed by a competent person.
- Remove any plastic film from the appliance and wipe over all surfaces with a damp cloth.
- Check that the voltage shown on the rating plate is suitable for your supply.

Location

- Always ensure that this appliance is installed on a level, firm flat surface that is capable of supporting the weight of the appliance.
- Ensure the appliance is set far enough back from the front of the work surface not to hang over the edge and cause an obstruction.
- Do not use this appliance outside.
- **WARNING:** During installation do not place on surfaces or near walls, partitions or kitchen furniture and the like – unless they are made of non-combustible material or clad with non-combustible heat insulating material and pay attention to fire prevention regulations.
- **IMPORTANT:** Do not locate this appliance in areas subject to excess temperatures or grease from cooking appliances such as fryers, as exposure to these elements may damage the appliance. Do not place this appliance in an area that restricts the airflow around the front and rear of the unit. Do not place the appliance in the direct discharge path or air conditioning vent or make up air vent.

Fitting a plug

- The mains lead of this appliance will already be fitted with a BS1363 13amp plug. In the event of replacing a fuse, a 13amp fuse approved by ASTA or BSI must be used.
- If the plug is not suitable for your socket then the plug must be cut off and disposed of safely.
- An appropriate plug must be fitted as follows:-
- **IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code: Green and Yellow – Earth, Blue – Neutral, Brown – Live
- The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E, the earth symbol or coloured Green and Yellow.
- The wire which is coloured Blue, must be connected to the terminal which is marked with the letter N or coloured Black or Blue.
- The wire which is coloured Brown, must be connected to the terminal which is marked with the letter L or coloured Red or Brown.
- Make sure that the connections are tight and that there are no loose strands of wire and no insulation trapped under the terminals. Tighten the clamp in the plug making sure that it grips the outer covering of the cord. In a 13amp (BS 1363) fused plug, fit a 13amp fuse and tighten

the plug cover securely.

- If you are in any doubt consult a qualified electrician.
- **IMPORTANT:** If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similar qualified person to avoid a hazard. The supply cord may become warm when the appliance is in use.
- **WARNING: This appliance must be earthed.**

Personal Safety

- **WARNING:** Extreme caution must be used when moving this appliance as it is very heavy.
- **WARNING:** External surfaces of this appliance may become very hot whilst in operation. Use caution when touching these surfaces.
- Always turn the appliance off, allow to cool down and unplug before adjusting, moving or cleaning.


Mains Cord

- The mains lead should reach from the socket to the appliance without straining the connections.
- Do not let the cord hang over the edge of the table or the counter and keep it away from any hot surfaces.
- Do not place the appliance where the mains lead could fall into a sink.

3. Other Safety Considerations

- Do not use this appliance if it has malfunctioned or has been damaged in any way.
 - Do not dismantle any part of the appliance. Responsibility cannot be accepted if this instruction has been ignored.
 - To protect against fire, electric shock and personal injury do not immerse cord, plug or appliance in water or any other liquid when cleaning and do not allow any water or liquid to come into contact with any of the electrical connections or controls.
 - The use of attachments or tools not recommended or sold by Burco may cause fire, electric shock or injury.
 - If the mains lead is damaged it should be replaced by a qualified technician.
 - Unplug from the mains outlet when not in use and before cleaning.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance
 - Maintenance other than cleaning should be performed by the manufacturer whilst this product is within guarantee (contact service help line) or otherwise by a qualified service engineer.
 - This appliance is not suitable for installations in an area where a water jet can be used.
 - This appliance must not be cleaned by a water jet.
- This appliance is only to be installed in locations where its use and maintenance is restricted to trained personnel.

For correct operation this appliance should be operated in an ambient temperature between 22-28 Degrees Celsius.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

4. Operation

The operation of this appliance should only be carried out by personnel that have been instructed in the operation of the appliance.

Connect the plug to the socket. Place required number of slices of bread into slots and select 2, 3, 4 or 6 slots to be operated (depending on model). The 4 slot model can be operated with either 2 or 4 slots operational and the 6 slot model can be operated with either 3 or 6 slots operational. This function can be selected with the slot selector switch located on the front Right of the product. Lower the bread into the appliance with the toast eject lever and set the timer to the required cooking time, by rotating the timer knob. The appliance is fitted with a 5 minute timer and will produce an audible alarm and switch off the power when cooking cycle has completed. Lift the toast by pressing the toast eject lever, you can raise and lower the bread at any time during its cooking cycle without interrupting the cooking. Note: Different types of bread will require varying cooking times.

During the toasting process it's normal for bread crumbs to fall into the crumb tray at the bottom of the appliance. The crumb tray must be emptied regularly to prevent a large build up of crumbs.

WARNING: When operating this appliance for the first time it is possible that the unit will smoke. This is normal and is only the thin film of oil burning off components and stainless steel and will only last for a short time

5. Technical Data

Model	TSSL14	TSSL16
Power Input	2240W	2860W
Rated Voltage	230V	230V
Frequency	50Hz	50Hz
Slot selection	2 or 4 slots	3 or 6 slots
Dimensions (mm) w x d x h	390x260x230	460x260x230

6. Cleaning

WARNING: Disconnect the appliance from the mains supply and allow to cool before cleaning.

IMPORTANT: Do not use any abrasive cleaning materials or fluids.

Clean the appliance with a soft cloth, warm water and detergent solution.

7. Guarantee

This appliance is guaranteed for 3 year parts and 1 year labour from the date of purchase against defective materials and fault workmanship (proof of purchase will be required).

This guarantee is given subject to the appliance being used in accordance with the instructions on the supply voltage marked on it and to the usual fair wear and tear conditions.

The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorized alterations to the appliance.

In any communication with the supplier, manufacturer or service dept, it is essential to quote the model and serial number marked on the rating label.

This guarantee, in no way diminishes the buyer's statutory rights.

Note: Element failures are excluded from our guarantee.

Burco products are intended for commercial use as detailed in these instructions. Burco has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Customer helpline

For spares and after-sales service please contact

Burco on:

T: 0844 815 3737

F: 0844 248 4123

E: info@gdha.com

Glen Dimplex Professional Appliances,
A Division of Glen Dimplex Home Appliances
Stoney Lane,
Prescot,
Merseyside L35 2XW
www.burco.co.uk



GLEN DIMPLEX
PROFESSIONAL APPLIANCES